

Coolant Provision

Friday, December 15, 2006

9:15 PM

Tools: (not included)

- Drill
- 1 3/8" Hole saw
- 5/32" Drill bit
- 3/8 NPT Tap
- Center punch

Unplug your machine!




Use receptacle for
template




Hot side of main fuse



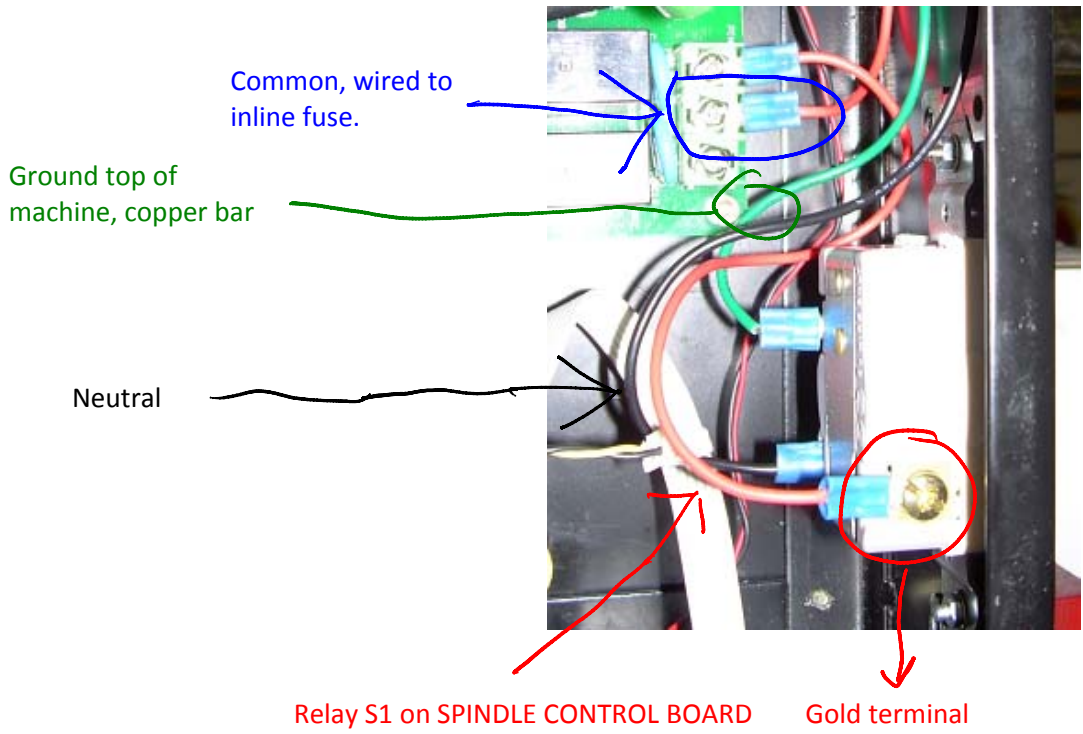

Neutral
(With white wire)

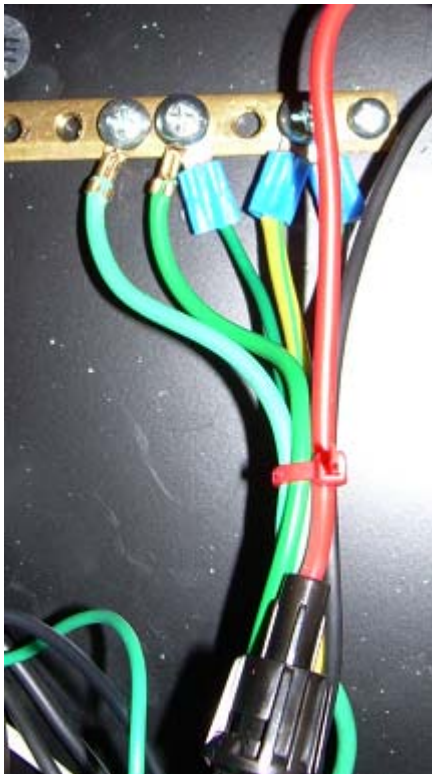

5 Amps MAX

